

Directions for Cleaning Chromebooks/Laptops/Computers



To clean outside of devices, hard surfaces, and keyboards:



- Wipes* can be used to clean the outside and keyboard of the Chromebook, laptop, or computer.
- Make sure to wring out the wipe before using it on the device.
- Allow to air dry or wipe dry with a microfiber cloth.

***See below for a list of acceptable wipes**

To clean screens:



- Use a very slightly damp soft cloth or towel/microfiber cloth to clean the Chromebook, laptop, or computer screen.
- Wipe in a circular motion using light force. Dust, particles, and even bacteria stick to the fibers of the cloth.
- **Never use disinfecting wipes or harsh cleaners on a screen.**

The following brands of wipes have been approved for use at school sites by the EPA (Environmental Protection Agency):

Staff and students:

- Better Life Natural All-Purpose Cleaner Wipes
- Unscented natural baby wipes (any brand)
- Microfiber cloths (chemical-free, reusable)

Staff ONLY:

- Greenworks Compostable Cleaning Wipes
- Lysol Daily Cleanser Wipes (white-top container)
- Seventh Generation All-Purpose Wipes (white container)
- Aunt Fannies Vinegar Wipes